

FORCE™ 8-800 HALF MASK FACE RESPIRATOR

ONE OF THE LIGHTEST, MOST WELL BALANCED HALF FACE MASKS AVAILABLE IN 3 DIFFERENT SIZES
PRODUCT CODES: SMALL: BHG003-1L5-000 MEDIUM: BHT003-0L5-000 LARGE: BHG003-2L5-000

TECHNICAL SPECIFICATION

RESPIRATORY PROTECTION

INSTRUCTIONS FOR USE

Place the respirator over the mouth and nose, then pull the harness over the crown of the head

Take the bottom straps in both hands, place them at the back of the neck and hook them together

Tighten the top straps first by pulling on ends to achieve a comfortable and secure fit

Tighten bottom straps using either front or rear adjustments (Strap tension may be decreased by pushing out on back side of buckles)

Perform a positive and/or negative pressure fit check

CR2 REFLECTIVITY:

Reflective strips create increased visibility in low-light environments for added safety



FACEPIECE:

Thermoplastic Elastomer
 Padded for extra comfort over prolonged use, and moulds to face shape for excellent seal

TYPHOON VALVE:

Polycarbonate valve casing and silicon diaphragm

FORCE FACE SIZE GUIDE:

Use this face size guide to determine whether you are small, medium or large to create the optimal face seal



SIZES



Small 8-810

Medium 8-820

Large 8-830

CLEANING & MAINTENANCE

Cleaning is recommended after each use. Remove the filters

Clean the facepiece (excluding filters) using a cloth moistened with a weak detergent solution and allow to air dry in a non-contaminated atmosphere

If filter cartridge is to be reused do not remove from respirator but clean with a cloth and warm soapy water and dry with a clean cloth

Respirator components, especially exhalation valve and seat, should be inspected prior to each use. A respirator with any damaged or deteriorated components should be discarded

The cleaned respirator should be stored away from contaminated areas when not in use



CONFORMITY

Half mask conforms to EN140

EC Type Examination Certificate Number 676977

TECHNICAL SPECIFICATION

ONE OF THE LIGHTEST, MOST WELL BALANCED HALF FACE MASKS AVAILABLE IN 3 DIFFERENT SIZES


PRODUCT CODES: SMALL: BHG003-115-000 MEDIUM: BHT003-015-000 LARGE: BHG003-215-000

RESPIRATORY PROTECTION

DIMENSIONS OF OUTER PACKAGING

Quantity: 1

Weight: 193g (Approx.)

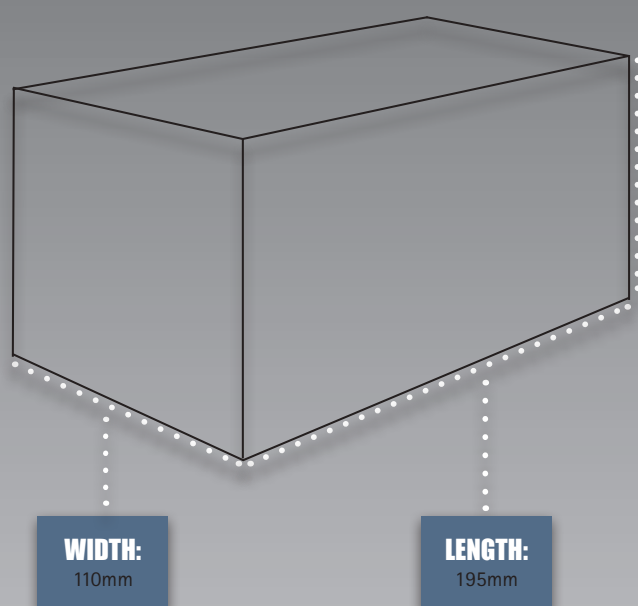

HEIGHT:
125mm

WIDTH:
110mm

LENGTH:
195mm



DIMENSIONS OF RESPIRATOR

Weight without filters: 193g (Approx.)

Weight with filters: 355-360g (Approx.)

FACE FITTING

Respiratory protection is only effective if it is correctly selected, fitted and worn throughout the time when the wearer is exposed to respiratory contaminants

FILTER INFORMATION

DESCRIPTION	FILTER	FILTER COLOUR	QTY
Organic Vapour Filter, Capacity 1	A1		80
Organic Vapour Filter, Capacity 2	A2		80
Organic Vapour Filter Capacity 2 & Particulate Filter Efficiency 3 Cartridge	A2P3		80
Organic & In-Organic Cartridge Capacity 1	AB1		80
Combination Vapour Cartridge Capacity 2	ABEK2		80
Particulate Cartridge Efficiency 3	P3		80

LIMITATIONS OF USE

These respirators do not supply oxygen
Do not use in oxygen deficient atmospheres

Do not use for respiratory protection against atmospheric contaminants which have poor warning properties, are unknown or immediately dangerous to life and health or against chemicals which generate high heats of reaction with chemical filters

Do not modify or alter this device

The assembled respirator may not provide a satisfactory face seal with certain physical characteristics (such as beards or large side burns) resulting in leakage between the facepiece and the face, the under assumes all risks of bodily injury which may possibly result

Do not use with unknown concentrations of contaminants

Use strictly in accordance with face piece and filter instruction leaflet



Certificate No. FM 22786
ISO 9001:2015

DECLARATION OF CONFORMITY TO EU REGULATION 2016/425, THE PERSONAL PROTECTIVE EQUIPMENT REGULATION

JSP Limited declare that the:

FORCE™ 8 HALFMASK

is in conformity with the PPE Regulation 2016/425. The product meets the requirements of EN140:1998. This declaration of conformity is issued under the sole responsibility of the manufacturer.

The notified body, BSI Group The Netherlands B.V., (NB2797), John M. Keynesplein 9, 1066 EP Amsterdam, The Netherlands performed the EU type-examination (Module B) and issued the EU type-examination certificate CE 676977.

The FORCE™ 8 HALFMASK is subject to the conformity assessment procedure Module D, laid out in Annex VIII of EU Regulation 2016/425, under surveillance of the notified body BSI Group The Netherlands B.V., (NB2797).

Signed for and on behalf of:

JSP Limited
Worsham Mill, Minster Lovell, Witney, Oxford, OX29 0TA, UK
25/10/2019

Matthew Judson,
Director – Respiratory and Technical Support

(English)

MANUFACTURING FOR SAFETY

JSP Limited, Worsham Mill, Minster Lovell, Oxford, OX29 0TA | Telephone: +441993 824000 | Fax: +441993 824422 sales@jpsafety.com | www.jpsafety.com

Registered in England: No. 791380. Carrick House, Lypiatt Road, Cheltenham, Gloucestershire, GL50 2QJ. VAT Number: GB 222 2162 61

